



Cooler Master ERGOSTAND III

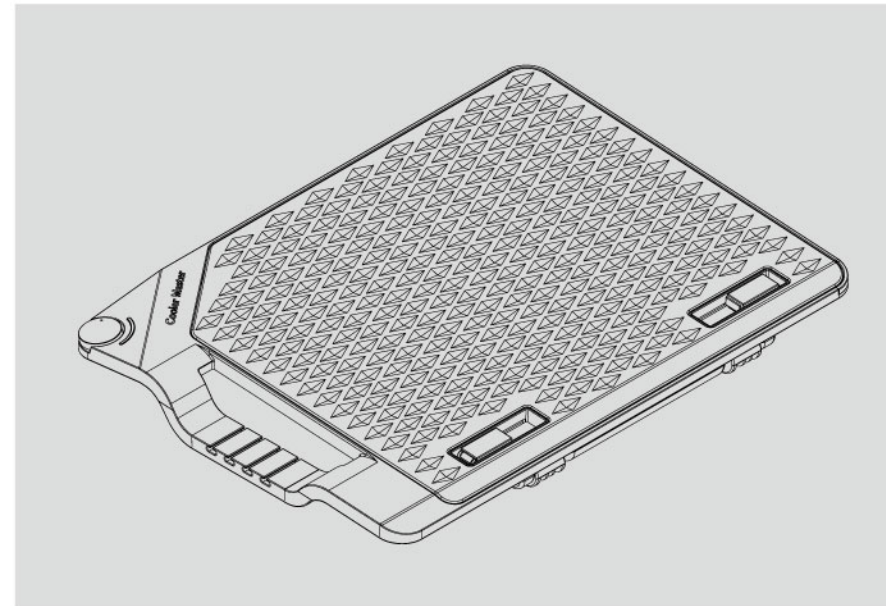


1

6 different height settings for user's requirement of better viewing angles.

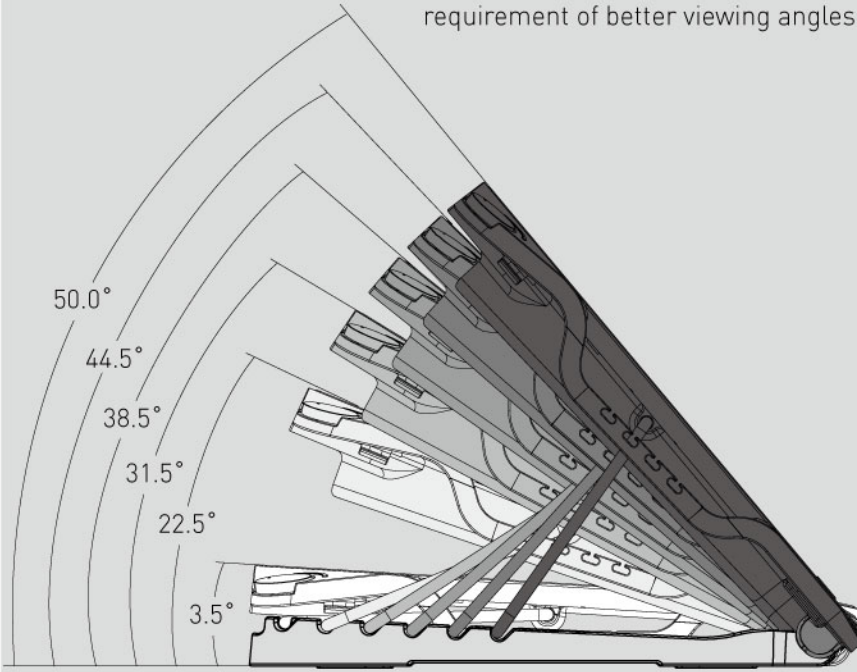

2

Open 2 props on the front panel. Adjust 2 props to inner side if you are using a tablet PC.

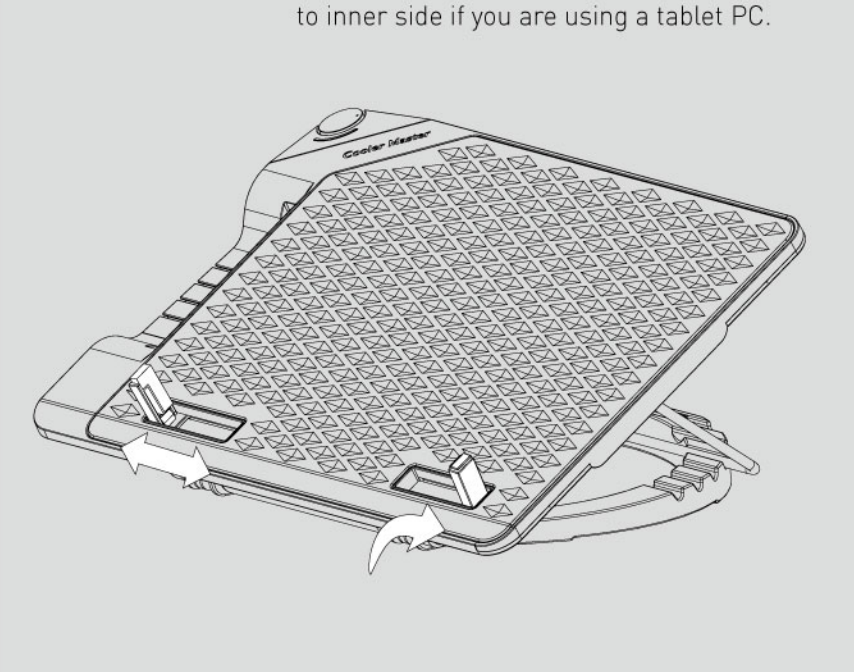

Asia Pacific - Cooler Master Technology Inc.
8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist.,
New Taipei City 23586, Taiwan (R.O.C.).
Tel: +886-2-2225-3517
Service: eservice@coolermaster.com.tw

CHINA
Cooler Master China
5F., Building B, No. 18, HeChang E. 4th Rd., ZhongKai, Hui-Zhou City,
Guang Dong Province, China
Tel: +86-752-260-8898
Service: web@coolermaster.com.cn

EUROPE
Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands
Tel: +31 (0)40 702 0900
Fax: +31 (0)40 702 0901
Service: support@coolermaster.eu

USA
Cooler Master USA
4820 Schaefer Ave, Chino CA 91710, USA
Service: support@coolermaster.com

Global Live Help: <http://www.coolermaster.com/livehelp>



<http://goo.gl/Q810AR>


For the most updated information, please visit our official website:
<http://www.coolermaster.com>
©2014 Cooler Master Technology Inc. All Rights Reserved.
All trademarks are registered to their respective owners.



510010140-GP
Ver 1.0: 2014/04


3

Place your laptop or tablet PC on the cooling pad.

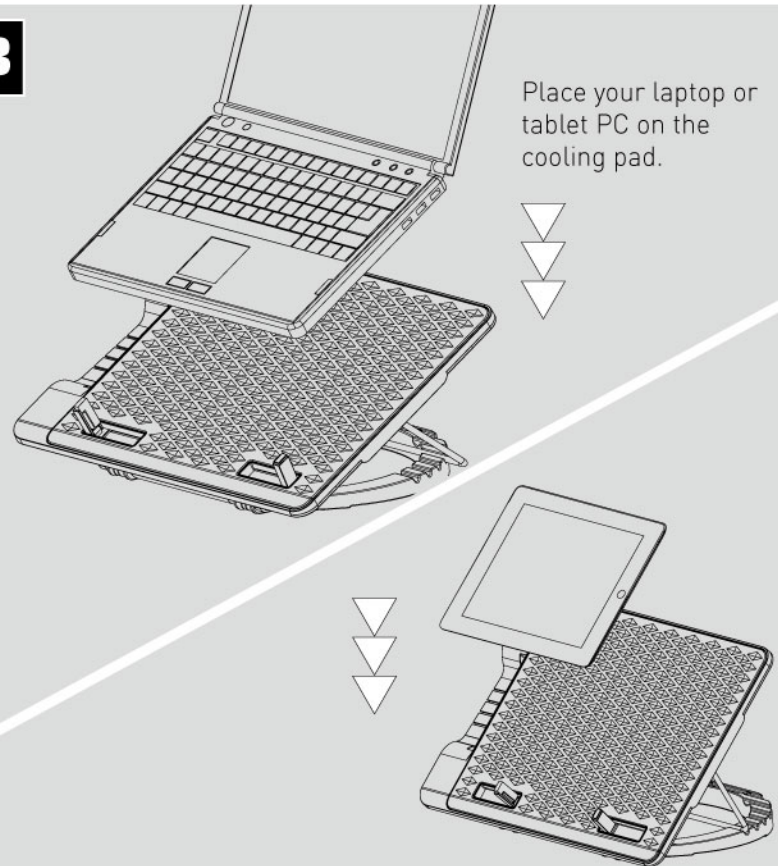

4

Adjust laptop to the most comfortable position. Connect laptop and cooling pad by USB cable. USB port to laptop; mini-USB port to cooling pad.

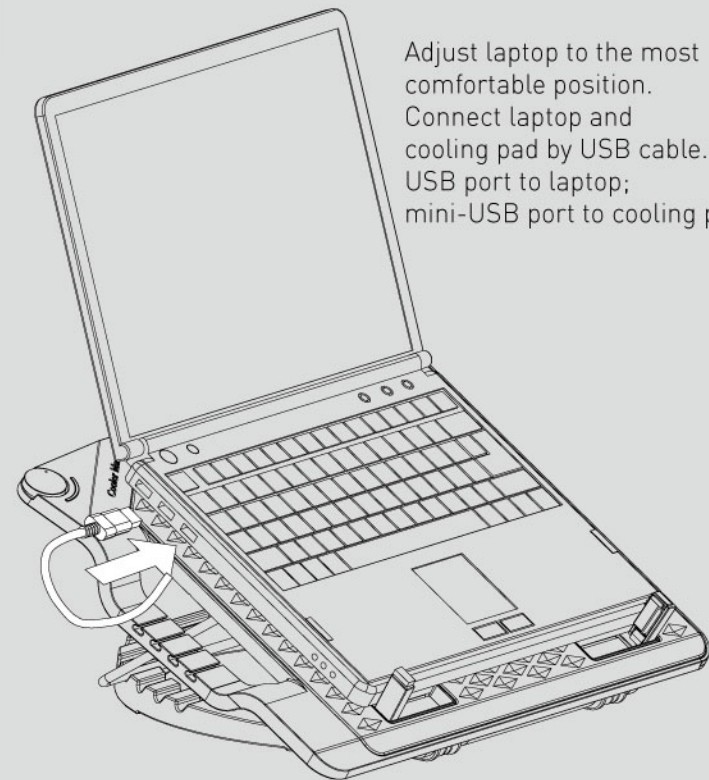

5

Push down cable into cable management grooves.



6

Remove the front panel by pulling down it from right side.

